

(3).音量調整（音量を小にする）

設定開始



%\$ + / 3

音量を小にする



%0 1 J 1

設定終了



%\$ + / 4

設定を保存



%\$ + / 0

(4). 音量調整（音量を大にする）

設定開始



%\$ + / 3

音量を大にする



%0 1 J 3

設定終了



%\$ + / 4

設定を保存



%\$ + / 0

(5). 音量調整（音量を中にする）

設定開始



%\$ + / 3

音量を中にする



%0 1 J 2

設定終了



%\$ + / 4

設定を保存



%\$ + / 0

(6). 音量調整（音を消す）

設定開始



%\$ + / 3

音を消す



%0 1 J 0

設定終了



%\$ + / 4

設定を保存



%\$ + / 0

(7). 常時電源ON

設定開始



;%\$+/ 3

常時電源ONにする



%0273

設定終了



;%\$+/ 4

設定を保存



;%\$+/0

(8). 通常モード電源

設定開始



;%\$+/ 3

通常モードにする



%0271

設定終了



;%\$+/ 4

設定を保存



;%\$+/0